


JEEP CHEROKEE

No.:	2704.1 Engine block;	2705.1 Gearbox
	2706.1 Transfer case	
Body:	All	
Year:	2008-	
Engine:	2.8D; 3.7i	
Transmission:	AT	

FITTING KIT

1. Bolt M10x20.....	2 pc
2. Bolt M10x30.....	6 pc
3. Bolt M10x50.....	2 pc
4. Beam.....	1 pc
4. Insert nut M10x65/32.5.....	2 pc
6. Washer 10.....	10 pc

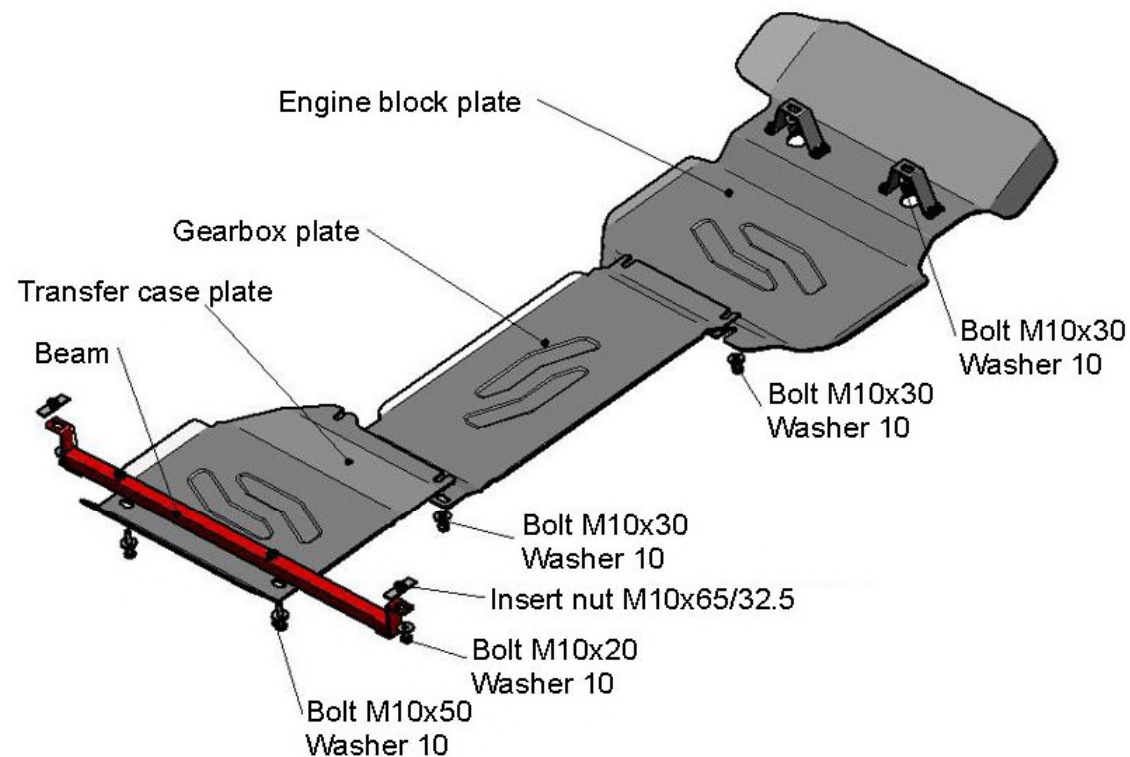

INSTALLATION INSTRUCTIONS

1. Remove original plastic cover of the engine block.
2. Fix the front end and rear end of engine block plate with bolts M10x30.
3. Place the front end of gearbox plate under the engine block plate, then fix the rear end of gearbox plate with bolts M10x30.
4. Mount insert nuts M10x65/32.5 in longerons in the rear end of the vehicle.
5. Fix the beam to mounted insert nuts M10x65/32.5 with bolts M10x20.
6. Place the front end of transfer case plate under the gearbox plate, fix its rear end to mounted beam with bolts M10x50.
7. Tighten all screws (50 Nm for M10, 30 Nm for M8, 10 Nm for M6). Use of pneumatic tools is prohibited.