


MINI Quick Fist
Rubber Clamp

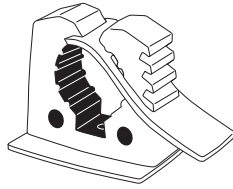

Safe Working Load:

1 Clamp

Screw or bolt: 13lbs (6 kilos)

2 Clamps

Screw or bolt: 26lbs (12 kilos)

Installation Instructions:

1. Use either #6 flathead screw or bolt and a small washer (Do Not Over-tighten).
2. The MINI QUICK FIST can be mounted with the strap facing in any direction.
3. To clamp: Put the tool or implement into the jaws and push the strap to its desired tightness.
4. The MINI QUICK FIST clamps are great as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C).


Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210 USA
www.endroad.com

ITEM #30032

U.S. AND world wide patents pending
UK patent 2403262

MINI Quick Fist
Rubber Clamp

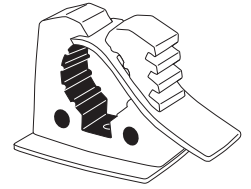

Safe Working Load:

1 Clamp

Screw or bolt: 13lbs (6 kilos)

2 Clamps

Screw or bolt: 26lbs (12 kilos)

Installation Instructions:

1. Use either #6 flathead screw or bolt and a small washer (Do Not Over-tighten).
2. The MINI QUICK FIST can be mounted with the strap facing in any direction.
3. To clamp: Put the tool or implement into the jaws and push the strap to its desired tightness.
4. The MINI QUICK FIST clamps are great as pipe stand-offs, but do not use on pipes whose temperature consistently exceeds 180 degrees F (or 82 degrees C).

Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210 USA
www.endroad.com

ITEM #30032

U.S. AND world wide patents pending
UK patent 2403262